


CRYSTORAMA LIGHTING



ASSEMBLY INSTRUCTION MODEL #JAR-2301-PN

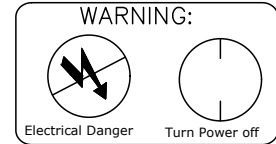


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



Including 1- Med. T10 Bulb
4 Watts Recommended 7 Watts Max
USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS Damp RATED

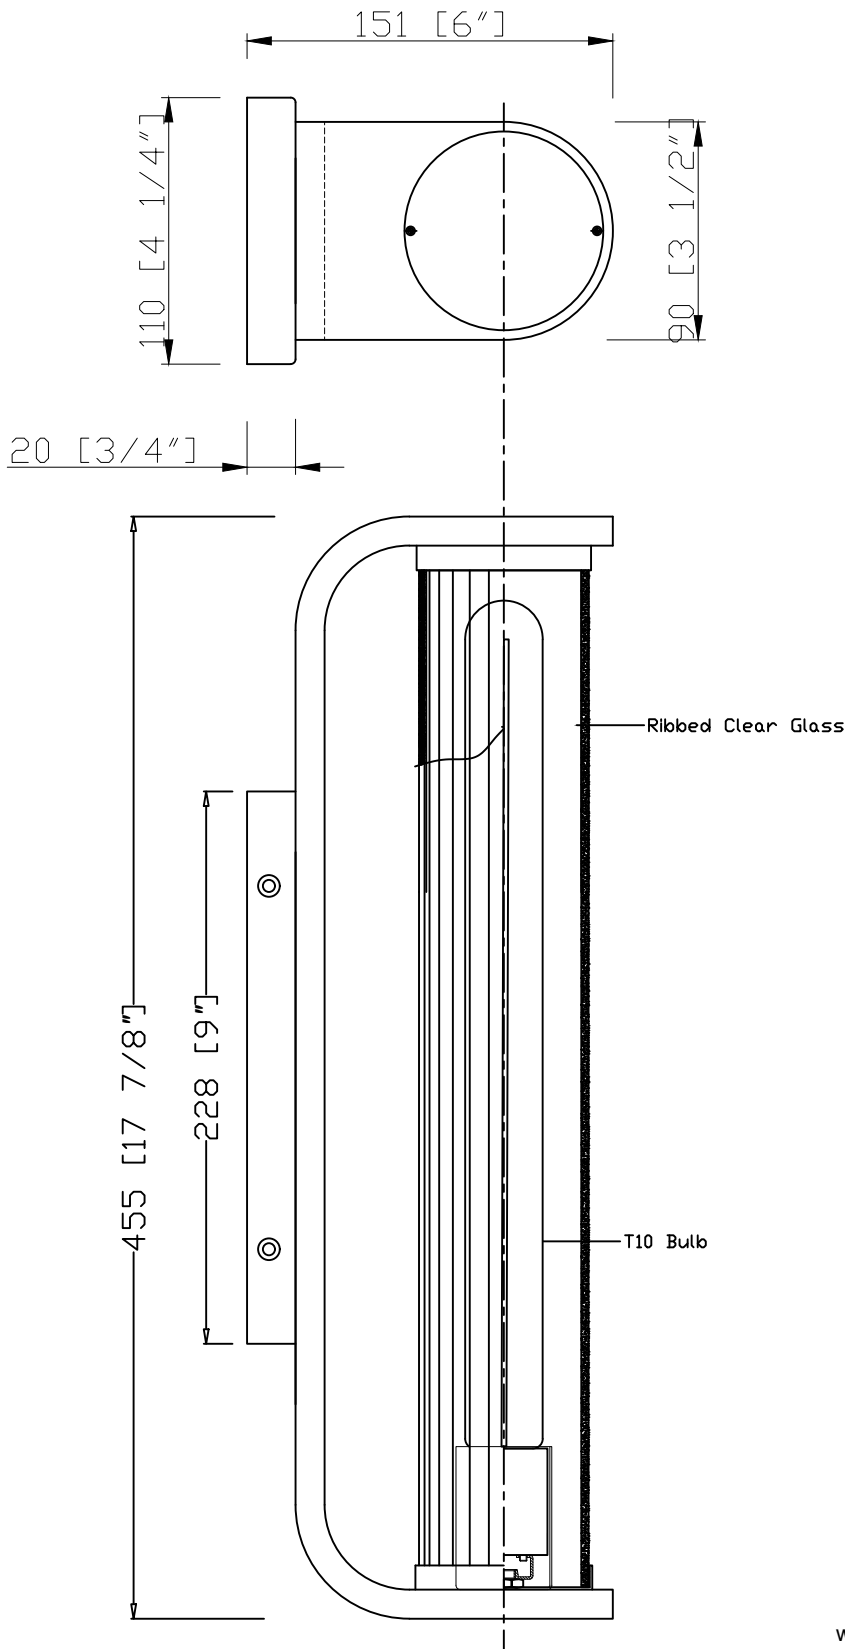


How to Install

1. Loosen the mounting plate from the frame and install the mounting plate onto the outlet box using the two outlet box screws.
2. Remove the top cover plate and cap by loosening the screws on the top of the frame.
3. Install the T10 bulb onto the socket.
4. Place the cap on top of the glass. While holding the cap on the glass with one hand, gently slide the glass over the socket from the top of the frame. Please handle with care to avoid the cap from being scratched. Secure the top plate onto the frame using the screws.
5. Place the fixture over the mounting plate and secure with the screws.



WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

PART NUMBER MODEL #JAR-2301-PN

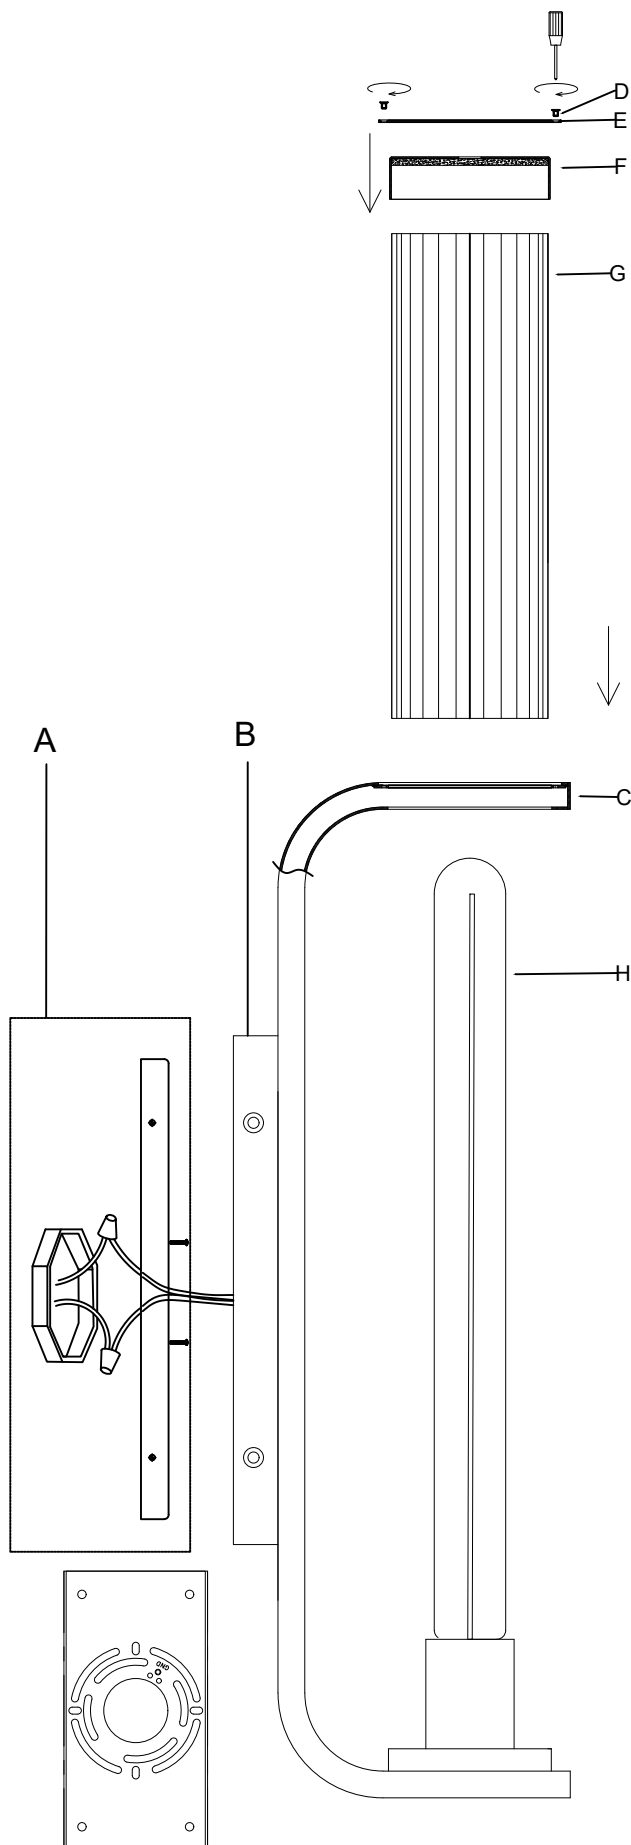

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Backplate (XAR2301PNBKP9IN)
- C. (1)-Frame
- D. (2)-Screws(2pcs extra)
- E. (1)-Cover plate
- F. (1)-Cap
- G. (1)-glass (XAR2301GLA17.25IN)
- H. (1)-T10-LED bulb included