


CRYSTORAMA LIGHTING





ASSEMBLY INSTRUCTION MODEL# LIN-M428-MK

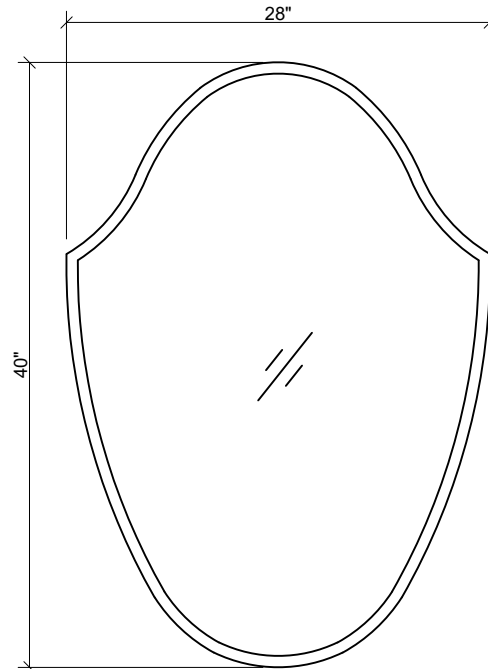

Option 1


Option 2

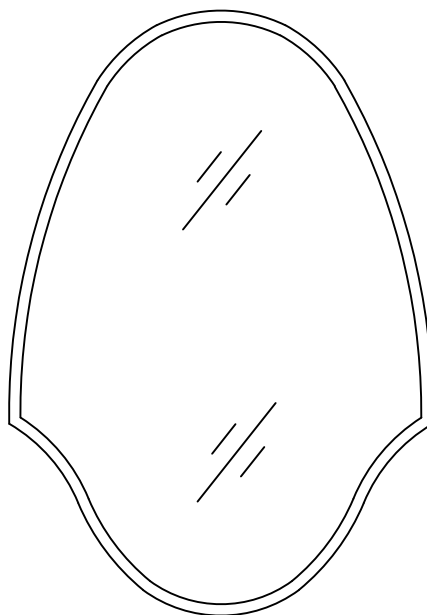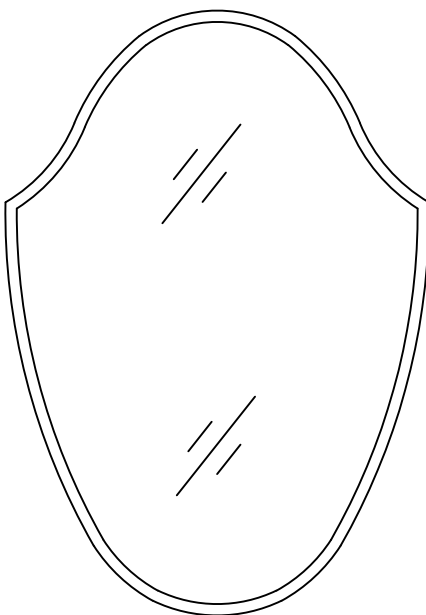

This mirror can be installed in reverse.

FRONT VIEW

metal cleat
(Option 1)

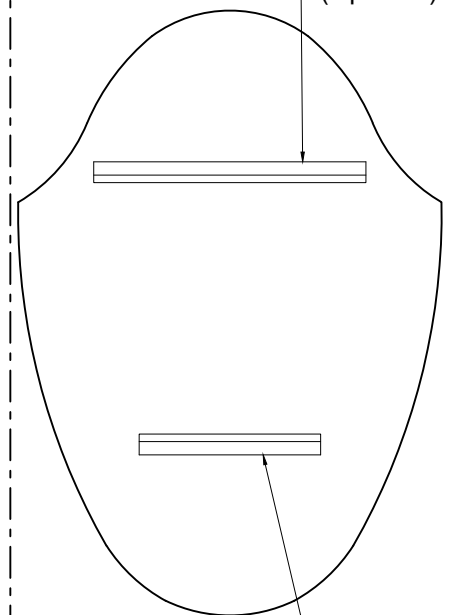

metal cleat
(Option 2)

BACK VIEW








INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x5 Wall cleat:  x1
Screws(B):  Ø4[mm]x40[mm]x5

NECESSARY TOOLS (NOT INCLUDED)



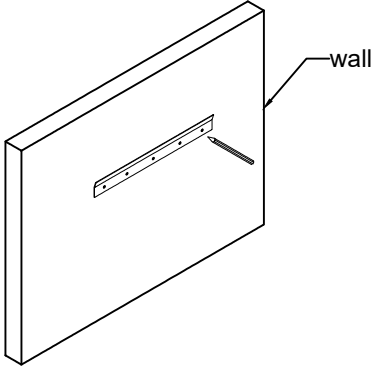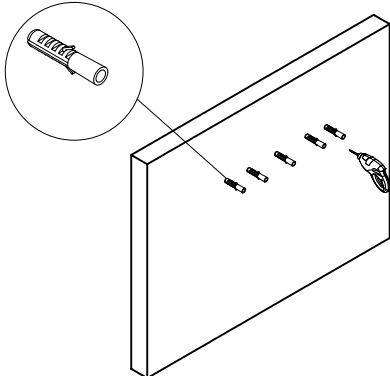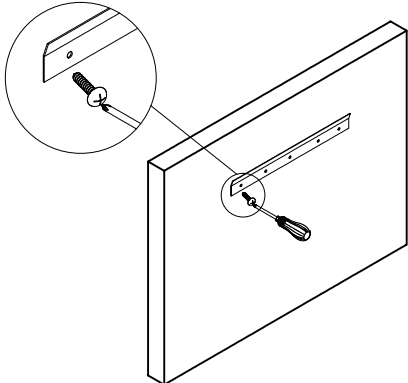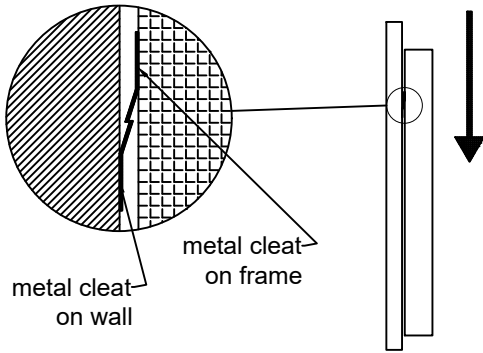	Step 1 Place one metal cleat at the desired wall location and mark five points at the center of the hole on the metal cleat using the pencil.
	Step 2 Drill the holes at the marked points and insert the anchors into the hole.
	Step 3 Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.
	Step 4 Carefully lift from the mirror frame sides and hang onto the metal cleat